

Assembly procedure for an attenuator

For assembly of the attenuator, the body of the attenuator must be maintain during the screwing operation, only the nut must be turned

